



ADJUSTMENT PROCEDURE

YH MECHANICAL ADVANCE ASSEMBLY

NOTE: Check local laws before changing advance limit or advance rate.

The advance rate indicates how fast the advance comes in. To change the advance rate, you *must* change springs. An advance curve kit (Part No. 29014) is available. The kit includes a selection of springs, degree keys, and detailed instructions.

The advance limit is the total amount of advance provided by the mechanical advance.

To adjust the advance limit, loosen the adjustment screws and rotate the adjustment plate. Adjustment range is 0° to 28°.

